

Wall Feed Thru for FLEXWELL® Elliptical Waveguide E58 and E60

The kit consists of wall gland, a single rubber boot and tension clamp with two bolts. FEATURES / BENEFITS

Elliptical Waveguide installation

- The wall gland provides a single entry in conjunction with a feed through plate
- It consists of a single rubber boot, wall gland and stainless steel clamp



External Document Links	
Installation Instruction	

Technical features

STRUCTURE

Product Line	Elliptical Waveguide Accessories
Product Type	Wall/Roof Feed-Through System
Feed-Through Component	Single Entry Kit
Transmission Line Type	E58, EP58, E60, EP60

Notes

MECHANICAL SPECIFICATIONS

Feed-Through Holes		1
Feed-Through Hole Diameter	mm (in)	70 (2.76)

PACKAGING INFORMATION

TACKACITO INTOKWATION		
Package Quantity	1	

WF-058/060 REV: A REV DATE: 26 Apr 2017 www.rfstechnologies.com